

# ULTRX™


## GEL EAR CUP REPLACEMENT PADS

MODEL NUMBER: 4152

LEARN MORE  
[ULTRX.COM](http://ULTRX.COM)



**1**  
Remove the old ear pads from the ear cups. Do this by reaching inside the cup area and placing your fingers between the foam and ridge of the ear pads. Remove by pulling the ear pad outward from the internal foam.

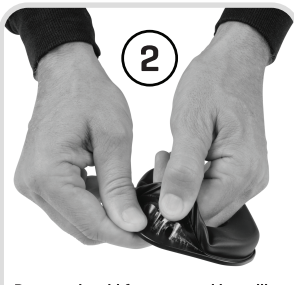

**2**  
Remove the old foam ear pad by pulling it away from the flat ear cup base. Remove it slowly and with even pressure to reduce the amount of adhesive left behind. Clean the surface of your plastic flat ear cup base with a gentle cleaner and allow to dry.



**3**  
Once the flat ear cup base is dry, place the new gel pads on by removing the 3M tape and applying evenly to the base [see fig 3,4].



**4**  
**5**  
Take the newly assembled gel ear pad base and snap back into place on the external rim of the ear cup by slowly working around the edges to make a complete fit.